

Dell T3600

winzozz

Use [Intel C600 SCU controller driver](#) during installation (unzip *.exe in external USB key).

From:

<https://wiki.csgalileo.org/> - **Galileo Labs**

Permanent link:

<https://wiki.csgalileo.org/tips/hw/dell-t3600>

Last update: **2017/10/15 16:19**

