

Udoo

Superuser

<http://www.udoo.org/forum/android-rooted-t1294.html>

unpack supersu apk and copy

```
mkdir /system/bin/.ext  
cp su /system/xbin/daemonsu  
cp su /system/xbin/su  
cp su /system/bin/.ext/.su  
cp install-recovery.sh /system/etc/install-recovery.sh  
echo 1 > /system/etc/.installed_su_daemon
```

add to device/fsl/udoo/init.rc

```
import init.superuser.rc
```

From:
<https://wiki.csgalileo.org/> - **Galileo Labs**

Permanent link:
<https://wiki.csgalileo.org/tips/udoo/android?rev=1427913961>

Last update: **2015/04/01 20:46**

