

Udoo

Superuser

<http://www.udoo.org/forum/android-rooted-t1294.html>

unpack supersu apk and copy

```
mkdir /system/bin/.ext
cp su /system/xbin/daemonsu
cp su /system/xbin/su
cp su /system/bin/.ext/.su
cp install-recovery.sh /system/etc/install-recovery.sh
echo 1 > /system/etc/.installed_su_daemon
```

add to device/fsl/udoo/init.rc

```
import init.superuser.rc
```

init.superuser.rc

```
on boot
    chmod 06755 /system/xbin/su

# su daemon
service su_daemon /system/xbin/su --daemon
    oneshot

on property:persist.sys.root_access=0
    stop su_daemon

on property:persist.sys.root_access=2
    stop su_daemon

on property:persist.sys.root_access=1
    start su_daemon

on property:persist.sys.root_access=3
    start su_daemon
```

From:
<https://wiki.csgalileo.org/> - Galileo Labs

Permanent link:
<https://wiki.csgalileo.org/tips/udoo/android?rev=1427953733>

Last update: **2015/04/02 07:48**



