

vgpu

- TESLA T4 NVIDIA Corporation TU104GL
- you must ensure that the SR-IOV SBIOS setting is enabled on the server.

into host

```
sudo apt install build-essential
echo 'blacklist nouveau' | sudo tee -a /etc/modprobe.d/blacklist.conf
sudo reboot
```

download NVIDIA-Linux-x86_64-460.73.01.run into juju cli and upload to host

```
juju scp /root/NVIDIA-Linux-x86_64-460.73.01.run $node1:/tmp
```

into host

```
sh /tmp/NVIDIA-Linux-x86_64-460.73.01.run
```

From:

<https://wiki.csgalileo.org/> - **Galileo Labs**

Permanent link:

<https://wiki.csgalileo.org/tips/vgpu?rev=1626776794>

Last update: **2021/07/20 12:26**

